



Knowledgebase > easYgen-3000XT > How to write active power (kW) setpoint through Modbus

How to write active power (kW) setpoint through Modbus

Özgür Tosun - 2022-04-05 - easYgen-3000XT

How to write active power (kW) setpoint through Modbus?

Example with Setpoint of 500 kW:

kW Remote Setpoint Address = 507

(This example shows the handling of the active power setpoint with PC software "ModScan32".)

1) Select the function, i.e. FC16



2) Number of Points.... -> O.K.



3) Enter the desired value.



4) Click Update.