



ナレッジベース > LS-5 > Mssing member {4063} LS5 V2 not recognizing

---

## Mssing member {4063} LS5 V2 not recognizing

Simon - 2024-10-10 - LS-5

What you can check is...

- Is the monitoring activated in all LS units?



- Is the number of LS5 communicating configured correctly in all units?



- How many units are shown in the multi unit screen?