



[ナレッジベース](#) > [Software Tools](#) > [Which Software and configuration cable is required for my control?](#)

Which Software and configuration cable is required for my control?

Clemens - 2026-03-23 - [Software Tools](#)

[Link to Software Downloads here](#)

Product	Software Tool	required cable
AMG-4 GCP-10	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
AMG-3 GCP-20	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
AMG-2 GCP-30	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
MFR11, 12,13, 14,15	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
MFR2, 3	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
SPM-D	none	none
SPM-D2	ToolKit	USB cable
ESDR-4	none	none
GW4	none	none
IKD1M	LeoPC1 or SW ID Changer Tool	DPC-1 5417-557 or DPC-USB 5417-1251
easYlite-100	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
easYlite-200	ToolKit-SC	USB
MFR300 (green housing)	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
MFR300 (black housing)	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251
easYgen-300	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
easYgen-400	ToolKit-SC	USB cable
easYgen-600	ToolKit-SC	USB cable
easYgen-800	ToolKit-SC	USB cable
easYgen-1400	ToolKit-SC	USB cable
easYgen-1500	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
easYgen-1600	ToolKit-SC	USB cable
easYgen-1700	ToolKit-SC	USB cable
easYgen-1800	ToolKit-SC	USB cable
easYgen-2200,2300,2500	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251
easYgen-3100/3200/3400/3500 first generation	ToolKit	RS232 Null modem cable
easYgen-3100XT/3200XT/3400XT-P1/P2/3500XT-P1/P2	ToolKit	* consider a USB to RS232 converter
DSL-2 MSLC-2	ToolKit	USB (Type B), Ethernet
DSL-2XT MSLC-2XT	ToolKit	RS232 null modem cable, Ethernet
RP-3000	ToolKit	USB (Type B), Ethernet
RP-3000XT	ToolKit	RS232 Null modem cable
LS-4	LeoPC	* consider a USB to RS232 converter
LS-5	LeoPC	Ethernet
LS-6XT	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251
GC-3400XT	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251
DTSC-50	LeoPC1	USB (Type B), Ethernet
DTSC-200	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251
DTSC-200A	ToolKit	DPC-1 5417-557 or DPC-USB 5417-1251

Legacy Woodward Industrial Controls

DSL-2		Handheld Programmer 9907-205
MSLC		Handheld Programmer 9907-205
EGCP-1	ServLink, Watch Window Pro	RS422/RS232 5417-551 ASSY RS422
EGCP-2	ServLink, Watch Window Pro	RS422/RS232 5417-551 ASSY RS422 FOR EGCP2 5417-551
EGCP-3	Watch Window, Watch Window Pro, Control Assistant	RS-232/ -422 / -485
SPM-A	none	none
LSM	none	none

Woodward Speed Controllers

SG-2D	LeoPC1	DPC-1 5417-557 or DPC-USB 5417-1251
EPG	none	none
DPG-2xxx	Universal PST	P/N 8447-1003 Adapter cable kit
APECS 2000	none	none
APECS 3000	APECS All Purpose Calibration Tool (ACT)	P/N SA-4455 Adapter cable kit
APECS 4000	APECS All Purpose Calibration Tool (ACT)	P/N SA-4475 Adapter cable kit
APECS 4500	APECS All Purpose Calibration Tool (ACT)	P/N SA-4488 ACT Kit

APECS 5000	APECS All Purpose Calibration Tool (ACT)	P/N SA-4488 ACT Kit
L-series	L-series Service Tool	P/N 8923-1061 L-SERIES SERIAL COMMUNICATIONS INTERFACE
F-series 14 pin connector	ToolKit FST	P/N 8923-1254 F-SERIES COMMUNICATION HARDWARE, 14 PIN
F-series 23 pin connector	ToolKit FSTP	P/N 8923-1255 F-SERIES COMMUNICATION HARDWARE, 23 PIN
2301A	none	none
2301D	Servink, Watch Window	RS232 null modem cable
2301E	ToolKit or Control Assistant	RS232 null modem cable