



DTSC-200A ATS Controller - Configuration



Quickstart Manual ToolKit Configuration
Release 1.0 - 4

Content

QR Code	3
Configuration Via PC	3
Install ToolKit Configuration and Visualization Software	3
Install ToolKit Software	3
Install ToolKit Configuration Files	4
Starting ToolKit Software	5
Configure ToolKit Software	6
Connect ToolKit and the DTSC200A Unit	7
View DTSC-200A Data with ToolKit	8
Configure the DTSC-200A with ToolKit	9
Password	10

Illustrations And Tables

Illustrations

Figure 2-1: ToolKit - visualization screen	8
Figure 2-2: ToolKit - analog value trending screen	8
Figure 2-3: ToolKit - configuration screen	9

Tables

Table 1-1: Manual - overview	2
------------------------------------	---

General Information

Type	English
DTSC-200A https://wss.woodward.com/manuals/PGC/DTSC_series/DTSC-200A	
DTSC-200A – Installation	37939
DTSC-200A – Configuration	37940
DTSC-200A – Operation	37941
DTSC-200A – Application	37942
DTSC-200A – Interfaces	37943

Table Fehler! Kein Text mit angegebener Formatvorlage im Dokument.-1: Manual - overview

QR Code



To get access to the complete product documentation, scan this QR code or use the following link:

→ <http://wwdmanuals.com/dtsc-200a>

Configuration Via PC



Install ToolKit Configuration and Visualization Software



NOTE

Woodward's ToolKit software is required to configure the unit via PC.

Install ToolKit Software

Woodward's ToolKit software is required to access the unit via PC

- Required version: 7.x or higher
- Please use the latest available version!
- To obtain the latest version scan this QR code or use the following link:

⇒ https://wss.woodward.com/manuals/PGC/SW_Tools/ToolKit.



NOTE

Microsoft .NET Framework 4.0 must be installed on your computer to be able to install ToolKit. If not already installed, Microsoft .NET Framework will be installed automatically. You must be connected to the internet for this. Alternatively, you can use the .NET Framework installer which can be found on the Product CD.

Install ToolKit Configuration Files

Configuration files and Technical Manual are available on a Woodward server.

The latest versions are available at www.easYgen.us/configuration

- Configuration
 - msi-file (installing application files and ToolKit)
 - eds-file (zipped)
- Technical Manual (PDF)



NOTE

ToolKit is using the following files:

*.WTOOL

File name composition: [P/N1]*¹-[Revision]_[Language ID]_[P/N2]*²-[Revision]_[# of visualized gens].WTOOL

Example file name: 8440-2297-B_US_5418-1234-NEW.WTOOL

Content of the file: Display screens and pages for online configuration, which are associated with the respective *.SID file

***.SID**

File name composition: [P/N2]*²-[Revision].SID

Example file name: 5418-1234-NEW.SID

Content of the file: All display and configuration parameters available in ToolKit

***.WSET**

File name composition: [user defined].WSET

Example file name: DTSC-200_settings.WSET

 
Content of the file: Default settings of the ToolKit configuration parameters provided by the SID file or user-defined settings read out of the unit.

*¹ P/N1 = Part number of the unit


*² P/N2 = Part number of the software in the unit

Starting ToolKit Software

1. Start ToolKit via Windows Start menu -> Programs -> Woodward -> ToolKit
2. Please press the button “Open Tool”

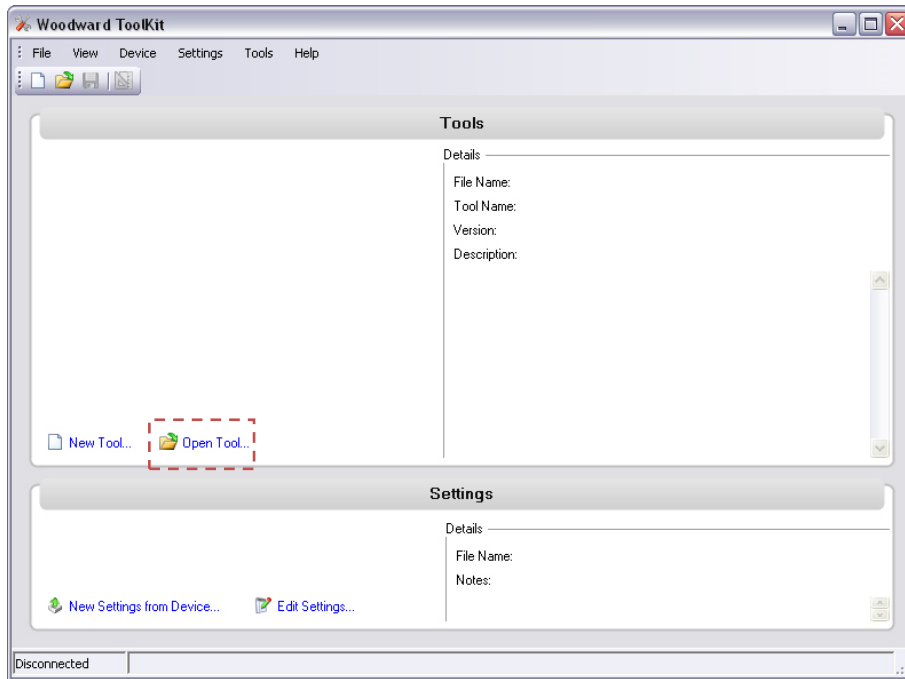


 3. Go to the “Application” folder and open then the folder equal to the part number (P/N) of your device (e.g. 8440-2297). Select the wtool file (e.g. 8440-2297_B_US_5418-1234-NEW.wtool) and click “Open” to start the configuration file
4. Now the home page of the ToolKit configuration screen appears

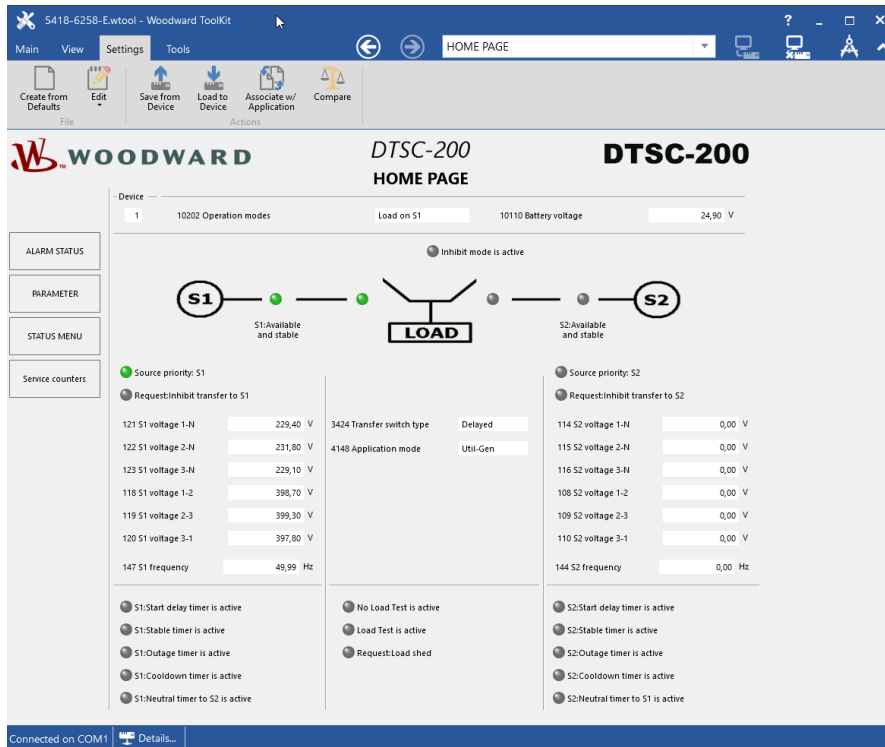


Configure ToolKit Software

1. Start the configuration by using the toolbar. Please go to Tools -> Options

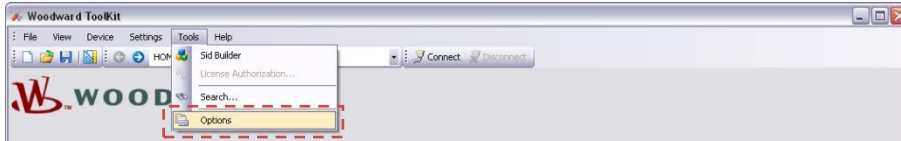

 2. The options window will be displayed

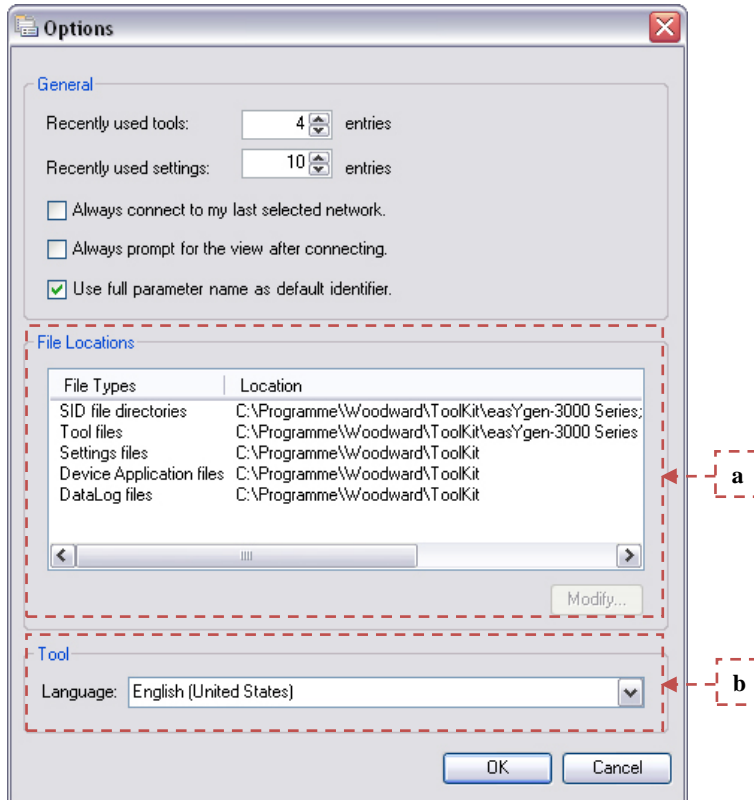

- a. Adjust the default locations of the configuration files
 - b. The displayed language can be selected here
3. The changes become effective after clicking "OK"






NOTE

Please use the ToolKit online help for further information.


Connect ToolKit and the DTSC200A Unit

For configuration of the unit via ToolKit please proceed as follows:

1. Plug the USB cable into your windows compatible computer and into the DTSC200A device. The USB driver should be automatically recognized. Check your Device Manager for proper running.
2. Open ToolKit via Windows Start menu -> Programs -> Woodward -> ToolKit
3. From the main ToolKit window, click File then select "Open Tool"..., or click the Open Tool icon  on the tool bar.
4. Locate and select the desired tool file (*.WTOOL) in the ToolKit data file directory and click Open.
5. From the main ToolKit window, click Device then click "Connect", or select the Connect icon  on the toolbar.

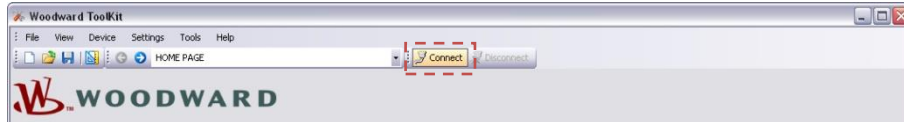

 6. The connect dialog window will open if the option is enabled.

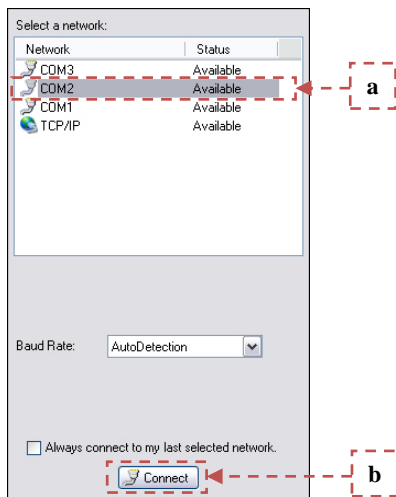

- a. Select the COM port that is connected to the communication cable.
 - b. Click the "Connect" button.
7. The identifier of the device that ToolKit is connected to, will display in the status bar.
8. If the Communications window opens, select "ToolConfigurator" under Tool Device and close the Communications window.



9. If the device is security enabled, the Login dialog will appear.
10. Now you are able to edit the DTSC-200A parameters in the main window. Any changes made are written to the control memory automatically.

View DTSC-200A Data with ToolKit

The following figure shows an example visualization screen of ToolKit:

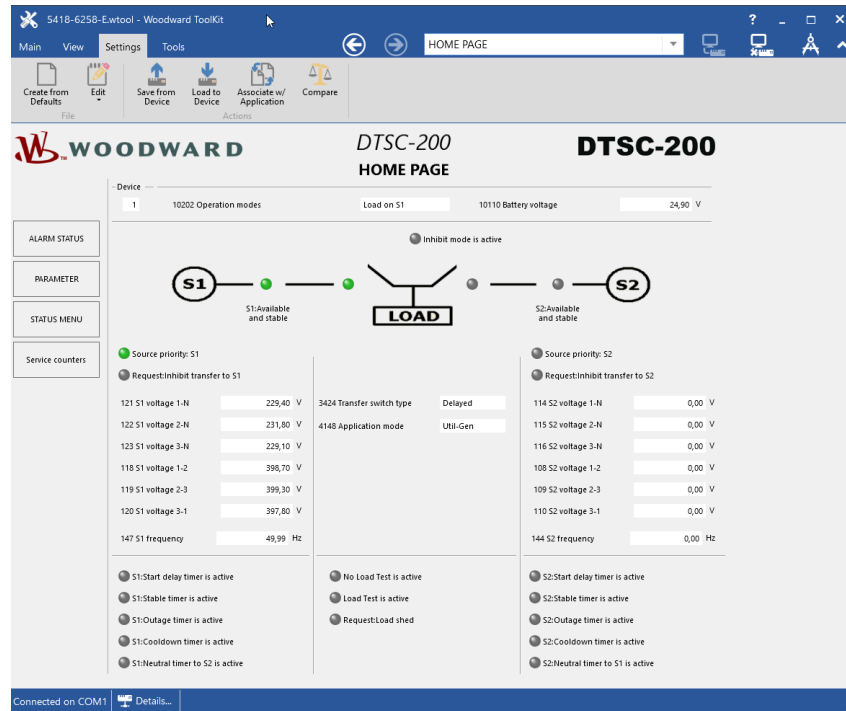 


Figure Fehler! Kein Text mit angegebener Formatvorlage im Dokument.-1: ToolKit - visualization screen

Navigation through the various visualization and configuration screens is performed by clicking on the left and right arrow icons, by selecting a navigation button (e.g. STATUS MENU), or by selecting a screen from the drop-down list to the right of the arrow icons.

It is possible to view a trend chart of up to eight values with the trending tool utility of ToolKit. The following figure shows a trending screen of the measured battery voltage value:

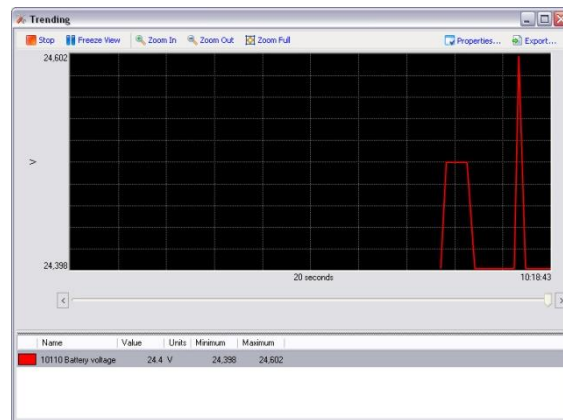


Figure Fehler! Kein Text mit angegebener Formatvorlage im Dokument.-2: ToolKit - analog value trending screen

Each visualization screen provides for trending of monitored values by right-clicking on a value and selecting the "Add to trend" function. Trending is initiated by clicking on the Start button. Clicking the Export... button will save the trend data to a Comma Separated Values (CSV) file for viewing, editing or printing with office software, like Microsoft Excel, etc. The Properties... button is used to define high and low limits of the scale, sample rate, displayed time span and color of the graph. The trend functionality is not available if ToolKit is used utilizing a CAN bus connection to the unit.

Configure the DTSC-200A with ToolKit

The following figure shows an example configuration screen of ToolKit:

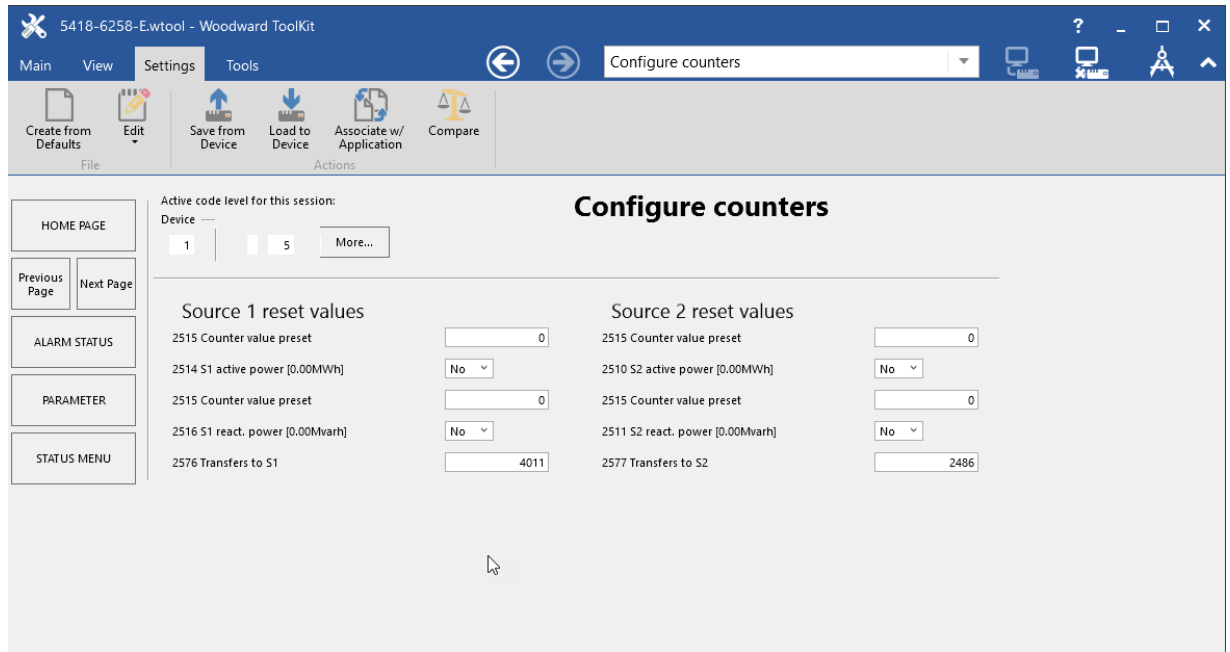 





Figure Fehler! Kein Text mit angegebener Formatvorlage im Dokument.-3: ToolKit - configuration screen

Entering a new value or selecting a value from a defined list will change the value in a field. The new value is written to the controller memory by changing to a new field or pressing the Enter key.

Navigation through the various configuration and visualization screens is performed by clicking on the  and  icons, by selecting a navigation button (e.g. ), or by selecting a screen from the drop-down list to the right of the arrow icons.

Password



The DTSC-200A utilizes a password protected multi-level configuration access hierarchy. This permits varying degrees of access to the parameters being granted by assigning unique passwords to designated personnel. A distinction is made between the access levels as follows:

Code level CL0 (User Level) Standard password = none
This code level permits for monitoring of the system and limited access to the parameters. Configuration of the control is not permitted. Only the parameters for setting the language, the date, the time, and the horn reset time are accessible. The unit powers up in this code level.

Code level CL1 (Basic Level) Standard password = "0001"
This code level entitles the user to change selected non-critical parameters, such as setting the parameters accessible in CL0 plus Bar/PSI, °C/°F. The user may also change the password for level CL1. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level.

Code level CL2 (Temporary Commissioning Level) No standard password available
This code level grants temporary access to most of the parameters. The password is calculated from the random number generated when the password is initially accessed. It is designed to grant a user one-time access to a parameter without having to give him a reusable password. The user may also change the password for level CL1. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level. The password for the temp. commissioning level may be obtained from the vendor.

Code level CL3 (Commissioning Level) Standard password = "0003"
This code level grants complete and total access to most of the parameters. In addition, the user may also change the passwords for levels CL1, CL2 and CL3. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level.



NOTE

Once the code level is entered, access to the configuration menus will be permitted for two hours or until another password is entered into the control. If a user needs to exit a code level then code level CL0 should be entered. This will block unauthorized configuration of the control. A user may return to CL0 by allowing the entered password to expire after two hours or by changing any one digit on the random number generated on the password screen and entering it into the unit.

It is possible to disable expiration of the password by entering "0000" after the CL1 or CL3 password has been entered. Access to the entered code level will remain enabled until another password is entered. Otherwise, the code level would expire when loading the standard values (default 0000) via ToolKit.

EN	Password			Password: Entry via front panel	0000 to 9999
DE	Passwort				
CL	(0)	(1)	(2)	The password for configuring the control via the front panel must be entered here.	
0	✓	✓	✓		
10416					



Designed in Germany

Woodward GmbH

Handwerkstrasse 29 - 70565 Stuttgart - Germany
Phone +49 (0) 711 789 54-510 • Fax +49 (0) 711 789 54-101
SupportPGD_EMEA@woodward.com

Homepage

<http://www.woodward.com>

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address/phone/fax/e-mail information for all locations is available on our website (www.woodward.com).

2023/09/Stuttgart