



ナレッジベース > LS-5 > Can a 2 breaker LS-5x2 accept incoming load between the 2 LS-5x2 breakers?

---

## Can a 2 breaker LS-5x2 accept incoming load between the 2 LS-5x2 breakers?

Clemens - 2022-03-30 - LS-5

LS-5x2 control only accepts outgoing load between the two LS-5x2 breaker.

Incoming load between the two breakers of LS5x2 is not supported