



ナレッジベース > DTSC-200 > Connect DTSC-200 or 200A to an easYlite-100 remote annunciator

---

## Connect DTSC-200 or 200A to an easYlite-100 remote annunciator

Clemens - 2024-09-27 - DTSC-200

### **DTSC -200 external DIs:**

Status external DI 2 is active as long as the "Acknowledge" button at the easYlite-100 is pressed.

Status external DI 3 is active if a fault is latched in the easYlite-100.

### **DTSC -200 external DOs:**

The external DOs 1-14 control the 14 LEDs at the paper strip.

DO 15 controls the LED with the icon „Oil Pressure“

DO 16 controls the LED with the icon „Coolant temp.“

## **All Documents and more:**

<https://wss.woodward.com/manuals/PGC/Accessories/easYlite-100>

[https://wss.woodward.com/manuals/PGC/DTSC\\_series/DTSC-200](https://wss.woodward.com/manuals/PGC/DTSC_series/DTSC-200)

[https://wss.woodward.com/manuals/PGC/DTSC\\_series/DTSC-200A](https://wss.woodward.com/manuals/PGC/DTSC_series/DTSC-200A)

DTSC-200 /200A are connected to easYlite-100 only, easYlite-200 is not supported so far.

**Keep in mind if an easYlite-100 is connected to DTSC-200/200A , IKD1M expansion card cannot added additionally to easYlite-100.**