



[Knowledgebase](#) > [easYgen-3000XT](#) > [Software](#) > [How to upgrade parameters of an Old easYgen-3000 configuration to the latest easYgen-3000XT configuration using Toolkit?](#)


How to upgrade parameters of an Old easYgen-3000 configuration to the latest easYgen-3000XT configuration using Toolkit?

Simon - 2025-02-07 - [Software](#)

If you're transitioning from an old easYgen-3000 product to its latest successor, such as the easYgen-3000XT, the **Toolkit** software offers a convenient feature to simplify the process. This tool can compare the configuration settings file (.WSET) of your old product and assist in converting it for use with the new easYgen-3000XT.

Please take the attached detailed documentation into account as well. (download available below this article)

Follow the steps in the screenshots below to complete the upgrade process:

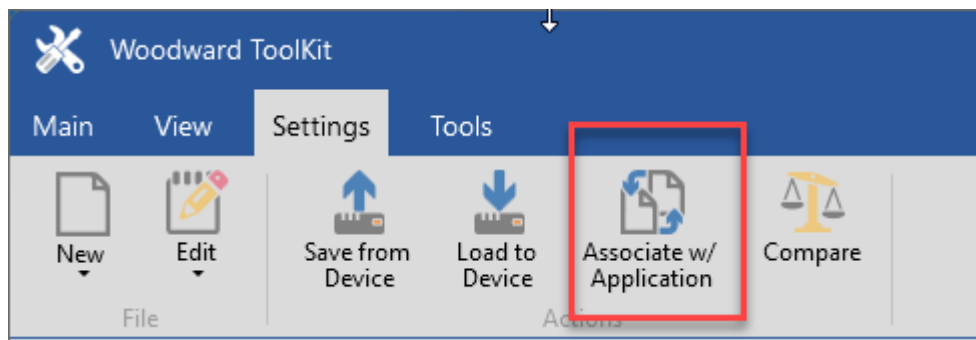



Associate Settings File with Application



Settings File Selection

Select the settings file to reassociate.



Click 'Browse' to select the file.

Browse...

☐ Set selected directory as default directory

Cancel

Next >



Associate Settings File with Application



Application Selection

Select the application that you wish to associate the selected settings with.





Specification Name	Description
EG3200XTP1 1.13-1_33106	EG3200XTP1 1.13-1_33106
EG3200XTP1 1.15-0_40937	EG3200XTP1 1.15-0_40937
EG3200XTP1 1.16-0_42735	EG3200XTP1 1.16-0_42735
EG3200XTP1 2.10-0_46141	EG3200XTP1 2.10-0_46141
EG3200XTP1 2.10-2_50555	EG3200XTP1 2.10-2_50555
EG3200XTP1 2.12-1_51274	EG3200XTP1 2.12-1_51274
EG3200XTP1 2.13-0_52483	EG3200XTP1 2.13-0_52483
EG3200XTP1_LITE 2.11-0_50817	EG3200XTP1_LITE 2.11-0_50817
EG3500XTP1 1.16-0_42732	EG3500XTP1 1.16-0_42732

SID File Locations...


Cancel

Next >

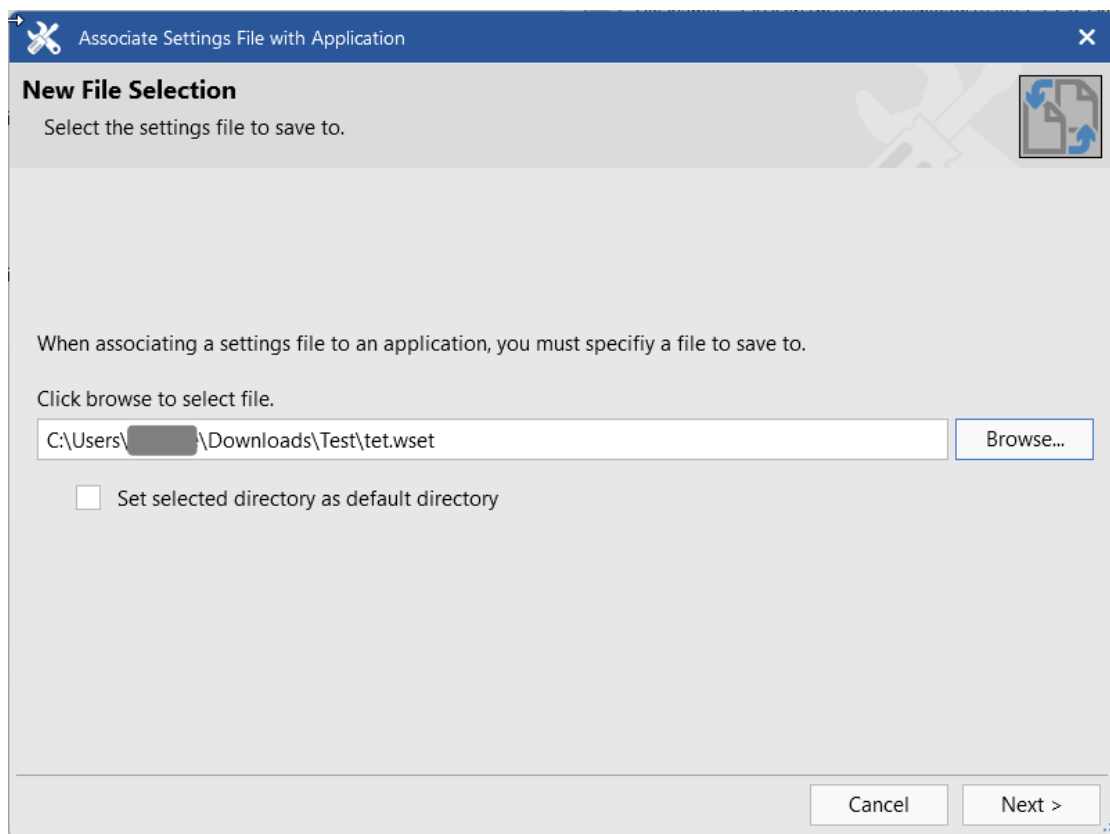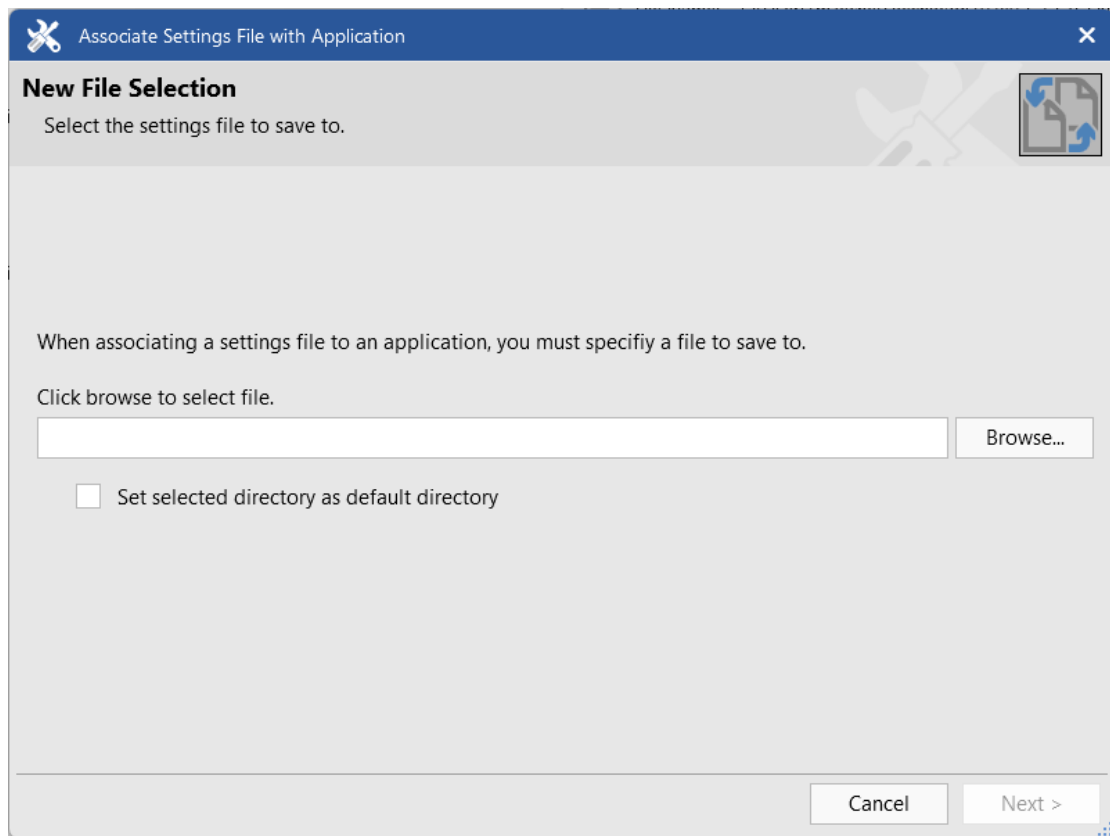


This does take a few moments. Just wait till the conversion is done, and next window shows up.

Upon successful conversion there comes this note below. A log file is generated at each conversion. Just for your reference.

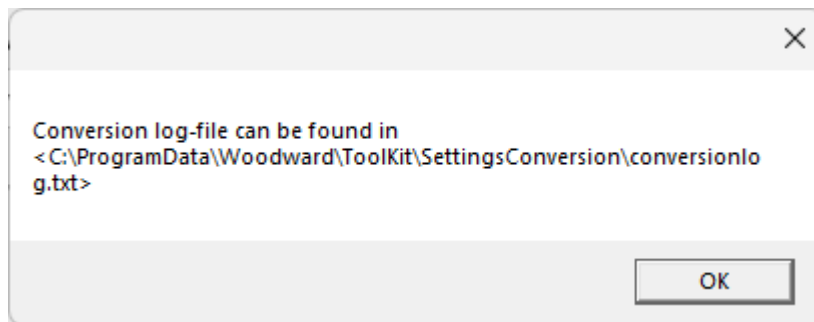

Click "OK" to close.

If there is no further action needed, there comes this message:

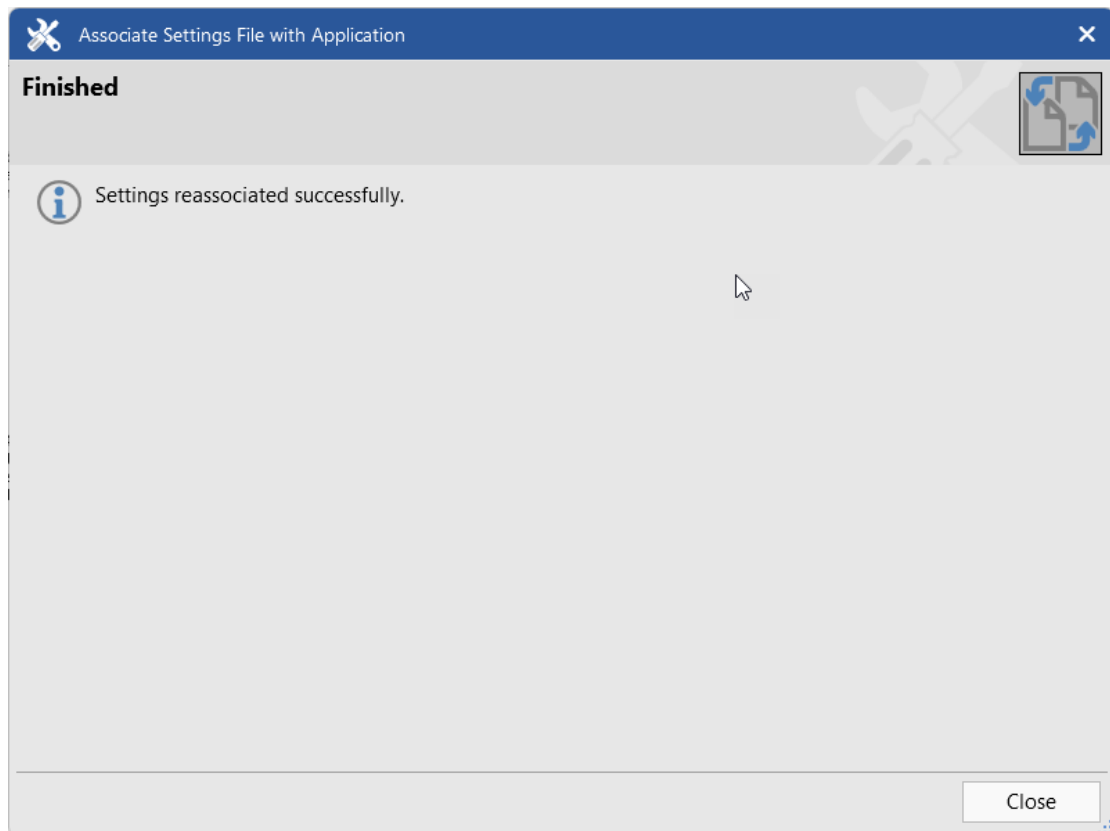

Click "Close" and you are done.

If not all parameters could be overtaken because e.g. of a pretty old easYgen version, then there comes a notification as below.

If possible it allows to "Map" old parameters to the new version step by step. Or just click OK to check/modify the parameters directly in the wset file later.

 Settings Differences 

Some settings in the file do not exist in the device application. If you would like to use the value from the settings file you must select a parameter in each list below and click the Map button. Otherwise, the device value will not be changed.

Unresolved settings in: 3243470_Parametersa...

Name	Value
------	-------

Unresolved settings in: tet

Name	Value
PARAMETER.Confi	0
PARAMETER.Confi	0
PARAMETER.Confi	Variable
PARAMETER.Confi	20

Map

Setting Name Mappings	Value
-----------------------	-------

Unmap

OK

Cancel

Attachments

- [Conversion_tool_exceptions_Version4_Nov2020.docx \(318.38 KB\)](#)